






STEP 1: color code

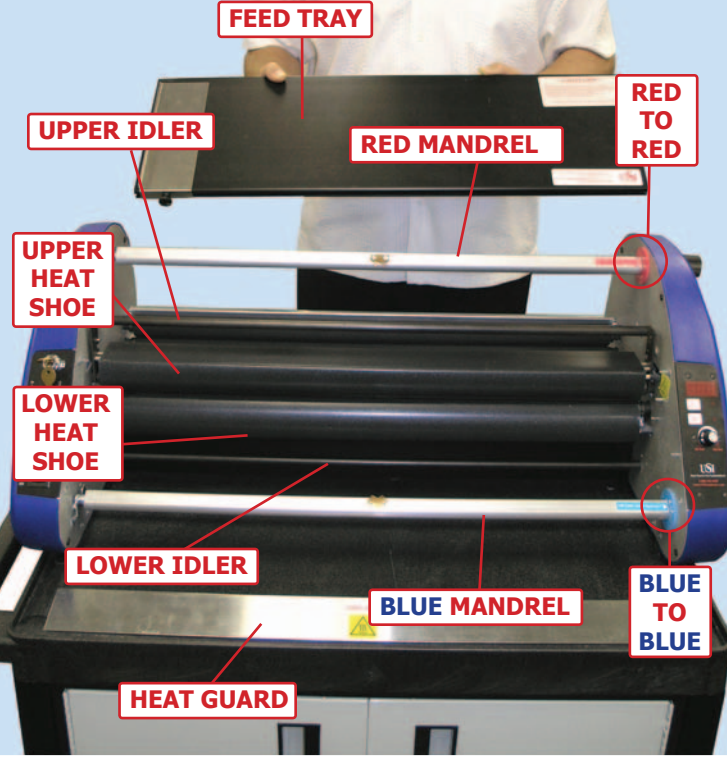

BOTTOM ROLL MANDREL





UPPER ROLL MANDREL

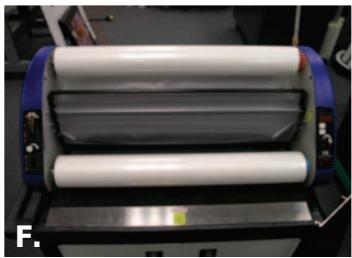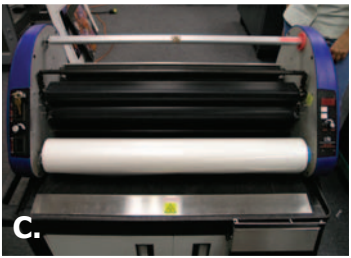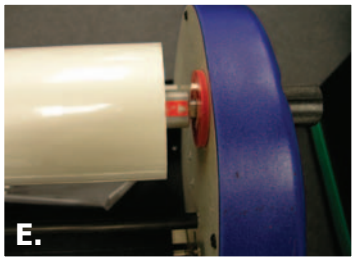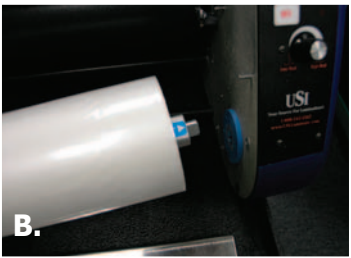

JUST MATCH THE COLOR AT THE END OF YOUR ROLL OF LAMINATING FILM TO THE COLOR ON YOUR MANDREL


STEP 2: threading film

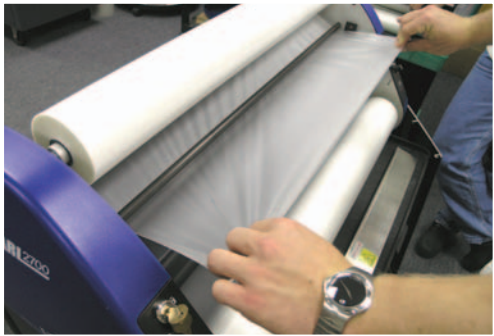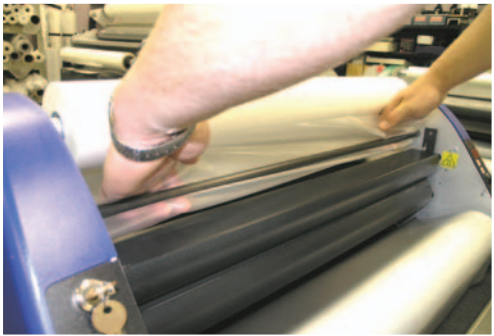

A. THREAD FILM UNDER IDLER BAR

B. PULL FILM DOWN OVER BLACK HEAT SHOES

C. PLACE FILM SO IT JUST COVERS BOTTOM HEAT SHOE

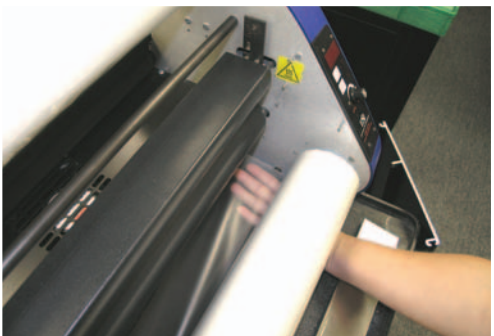


A. THREAD FILM UNDER LOWER IDLER BAR

B. PULL FILM FROM UNDER LOWER IDLER BAR

C. PULL FILM UP AND PLACE OVER TOP HEAT SHOE

STEP 3: getting ready to laminate

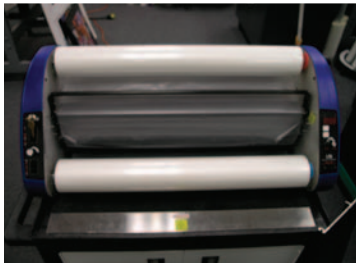


A. TOP AND BOTTOM FILM SHOULD BE OVERLAPPED ON TOP OF BOTH HEAT SHOES



B. USING THICK PAPERS (WE SUGGEST MANILA FOLDERS) FIRMLY PUSH THRU LAMINATOR



C. MAKE SURE TO GUIDE FOLDERS THRU BACK ROLLERS AND OUT THE BACK OF THE LAMINATOR

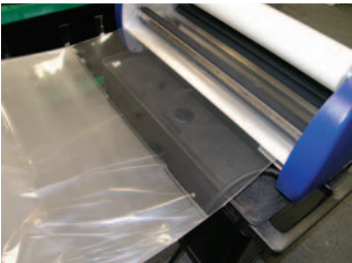

DONE!
NOW YOU ARE READY TO LAMINATE

*TURN MACHINE ON AND HIT FORWARD BUTTON